

Haval H6

GT Petrol

Service Schedule



Months	12	24	36	48	60	72	84	96	108	120
Mileage *1000 km	10	25	40	55	70	85	100	115	130	145
Engine oil*	R	R	R	R	R	R	R	R	R	R
Engine oil drain plug washer*	R	R	R	R	R	R	R	R	R	R
Engine oil filter*	R	R	R	R	R	R	R	R	R	R
Throttle valve		C		C		C		C		C
Inside intercooler and pipeline		C		C		C		C		C
Spark plug			R			R			R	
Generator / water pump belt	Replace every 100,000 km									
Transmission Oil (AT)*	Replace every 48 months/55,000 km, which ever occurs first (Inc pressure cartridge & filter housing)									
Transfer case oil			R			R			R	
Rear main reducer oil			R			R			R	
Torque manager lubricant	Replace every 48 months/55,000 km, whichever occurs first									
Tension of important fasteners	I	I	I	I	I	I	I	I	I	I
Disc brake front and rear	I	I	I	I	I	I	I	I	I	I
Tyre pressure and wear	I	I	I	I	I	I	I	I	I	I
Ball joint and dust cover	I	I	I	I	I	I	I	I	I	I
Air cleaner element*	C	R	C	R	C	R	C	R	C	R
Air conditioner filter element*		R		R		R		R		R
Canister filter cleaning*			C			C			C	
Engine coolant	Replace every 48 months/55,000km, whichever occurs first									
Brake fluid			R			R			R	
Radiator (appearance)	I	I	I	I	I	I	I	I	I	I
Intercooler (appearance)	I	I	I	I	I	I	I	I	I	I
Battery	I	I	I	I	I	I	I	I	I	I
Sunroof	I	I	I	I	I	I	I	I	I	I
Sunroof drain	I	I	I	I	I	I	I	I	I	I
Sign of oils / fluid leakage	I	I	I	I	I	I	I	I	I	I
Lights and warning device operation	I	I	I	I	I	I	I	I	I	I
Parking brake operation	I	I	I	I	I	I	I	I	I	I
Recall / Service Campaign check	I	I	I	I	I	I	I	I	I	I
Road test quality control	I	I	I	I	I	I	I	I	I	I

R =Replace, I = Inspect, C= Clean,

* Shorter in severe environment



Haval H6 GT PHEV Service Schedule



Months	12	24	36	48	60	72	84	96	108	120
Mileage *1000 km	10	25	40	55	70	85	100	115	130	145
Engine oil*	R	R	R	R	R	R	R	R	R	R
Engine oil drain plug washer*	R	R	R	R	R	R	R	R	R	R
Engine oil filter*	R	R	R	R	R	R	R	R	R	R
Throttle valve	I	I	I	I	I	I	I	I	I	I
Inspect Intercooler Connector and Pipes	I	I	I	I	I	I	I	I	I	I
Spark plug	First replace at 40,000km/36Mth, then every 45,000km/36Mth following.									
Transmission Oil	First replace at 55,000km/48Mth, then every 60,000km/48Mth following.									
Rear Electric Drive axle oil	Replace every 60,000kms if vehicle is driving under Severe Duty Conditions . Refer Severe Duty Document for more information.									
Important bolts and nuts	I	I	I	I	I	I	I	I	I	I
Disc brake	I	I	I	I	I	I	I	I	I	I
Tyre pressure and wear	I	I	I	I	I	I	I	I	I	I
Visual Alignment Check and Road Test	I	I	I	I	I	I	I	I	I	I
Ball joint and dust cover	I	I	I	I	I	I	I	I	I	I
Air filter element*		R		R		R		R		R
Air conditioner filter*		R		R		R		R		R
Radiator (appearance)	I	I	I	I	I	I	I	I	I	I
Intercooler (appearance)	I	I	I	I	I	I	I	I	I	I
Carbon canister filter*			C			C			C	
Water pump belt	I	I	I	I	I	I	I	I	I	I
Engine coolant	First replace at 55,000km/48Mths, then every 60,000km/48mths following.									
Power battery pack coolant	First replace at 55,000km/48Mths, then every 60,000km/48mths following.									
Brake fluid	First replace at 40,000km/36Mths, then every 45,000kms/36Mths following.									
Panoramic sunroof	I	I	I	I	I	I	I	I	I	I
Sunroof drainage pipe	I	I	I	I	I	I	I	I	I	I
Battery and Connection	I	I	I	I	I	I	I	I	I	I
Leakage(oil/water/electricity/air)	I	I	I	I	I	I	I	I	I	I
Lighting	I	I	I	I	I	I	I	I	I	I
Battery Inspection required every 2 nd Service	Power Battery Bolts between power battery pack and chassis	I		I		I		I		I
	Power battery pack(appearance)	I		I		I		I		I
	Power battery pack high/low voltage connector	I		I		I		I		I
	Power battery status parameters	I		I		I		I		I
Parking brake operation	I	I	I	I	I	I	I	I	I	I
Recall / Service Campaign check	I	I	I	I	I	I	I	I	I	I
Road test quality control	I	I	I	I	I	I	I	I	I	I

R =Replace, I = Inspect, C= Clean,
* Shorter in severe environment



GWM Servicing - Severe duty Driving Conditions

As with all vehicles, Severe Duty Driving Conditions requires additional maintenance requirements to ensure your vehicle is running at its best. Conditions may vary depending on the operation of your vehicle, so whilst the below list is a good indicator of Severe or Heavy-Duty Driving conditions, it is always best to refer to your local GWM Authorised Service Location for further assistance and advice.

To find your closest location, please follow this link:

Severe Duty Driving Conditions include but are not limited to:

- Repeated short trips of less than 16km when outside temperatures remain below freezing or normal vehicle operating temperature is not achieved.
- Repeated extensive periods of idling, such as use as a taxi, rideshare, door-to-door delivery, or other uses that include extended periods of idling.
- Operating the vehicle in off-road or dusty conditions, including but not limited to unpaved roads, dusty roads, sandy roads etc.
- Repeatedly towing a trailer or caravan, using the vehicle with a rooftop carrier installed, or carrying maximum vehicle loads.
- Repeated use of "Launch Control" mode in applicable vehicles.
- Hard Driving, such as track use or driving with frequent hard accelerations.

If you find your vehicle meeting one or more of the above conditions, please shorten your service interval, apply any "Severe Duty" Service conditions to your vehicle, and/or, carry out an interim service on your vehicle. Service actions completed as "Severe Duty Driving" are not included in Capped Price Servicing and are at an additional expense to the customer.

You may also find your vehicle is subject to specific "Severe Duty service requirements". Please refer to your service schedule for more information.

H6GT PHEV

- Replace Rear Electric Drive Axle Oil every 60,000kms if vehicle driven under Severe Duty Conditions.

Diesel Variant Vehicles

- GWM recommends inspection of Throttle Valve and EGR Valve and Cooler every service. Under Severe Duty Conditions GWM recommends these components are cleaned of carbon deposits when required.

GWM would also like to remind drivers that routine checks and vehicle cleaning conducted by the driver/owner are essential to ensuring your vehicle is running at its best.

This includes checking the oil level, the washer fluid level, and ensuring your vehicle is regularly and thoroughly cleaned to avoid any damage to paint and/or to avoid rust when vehicles are operated in and/or reside in "salty" areas such as beachside areas, river areas, etc.

GWM refers the customer to their owner's handbook for more information about their vehicle, its maintenance and checks they can do to ensure their vehicle is running smoothly.